

Assembly & Installation Guidelines Frameless Mirror — Gothic, Rectangle and Rounded Rectangle


Please read these guidelines carefully before installing and using the product.

SAFETY INFORMATION

- Always wear appropriate safety equipment.
- This product requires two people for installation.
- Be careful when handling glass – damage to edges or surface scratches could lead to sudden breakage or cracking of the glass. Glass is most vulnerable when collided from the side. If glass breaks, injuries may occur.
- If this product falls down, serious or fatal crushing injuries can occur. This product should be permanently fixed to the wall.
- Assembly should be carried out by an appropriately skilled person, due to the risk of wrongful assembly leading to injury or damage.



ITEMS INCLUDED IN THE BOX

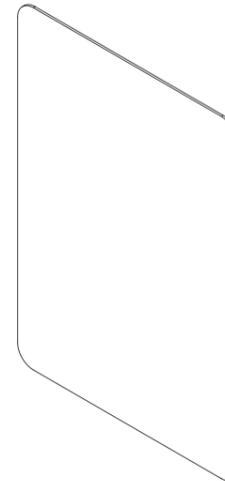

1 x polished edge mirror
 Up to 1200 mm W
 Up to 900 mm H x 6 mm D

 4 x clear packers
 50 mm W x 3 mm H x 3 mm D

EXTRA ITEMS AND TOOLS REQUIRED CHECKLIST

These items are readily available from all major hardware stores:

Double-sided mirror mounting tape <input type="checkbox"/>	Spirit level and pencil <input type="checkbox"/>
Mirror metal and glass adhesive (neutral-cure formulation) <input type="checkbox"/>	Painter's tape <input type="checkbox"/>
Silicone gun <input type="checkbox"/>	Soft timber packers <input type="checkbox"/>

IMPORTANT INFORMATION


- These mirrors are not intended for use in environments where high humidity or airborne corrosion parameters are consistently present (e.g., saunas, swimming pools, medical baths and more).
- Do not install mirrors on freshly painted walls within 14 days.
- Do not fully seal perimeter of mirror.
- Ensure surfaces are clean and dry before adhesive application.
- These mirrors are not intended for instances where safety glazing is required, such as the following applications:
 - , On doors or as a side panel to a door.
 - , Within 2000 mm of any stairs.
- Mirrors must always be completely adhered to a solid backing (e.g., wall, timber cupboard) in such a way that all pieces will remain bonded to the backing in the event of glass breaking.
- Mirror may be used with a fixed vanity or bench that extends the full width of the mirror and is located in front of the glass or mirror. If so, the fixed vanity or bench must be not less than 760 mm in height and a depth of not less than 300 mm.
- The bottom edge of the mirror shall be installed:
 - , Not less than 500 mm above floor level in a dwelling (e.g., house, apartment).
 - , Not less than 1000 mm above floor level in a school or early childhood centre.
 - , Not less than 1500 mm above floor level in an aged care building or nursing home.
- When installing the mirrors, it is suggested you examine the mirror from a distance of 2000 mm for optimal viewing from in front of the area being examined.

BEFORE YOU BEGIN INSTALLATION

Clean the wall surface to ensure it is free from dust, grease, oil and loose powdery materials. Allow the wall surface to dry.

Open the mirror box and leave the mirror laying face down in the box for protection.


Step 1

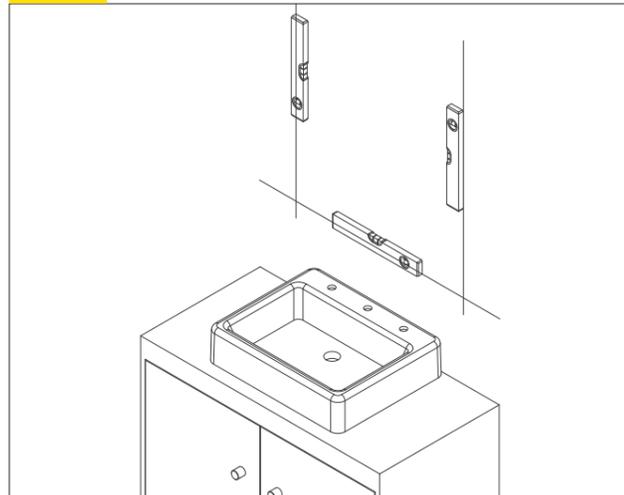

With your level plumb, mark a vertical line on the wall where the edge of the mirror is to be installed.

Using your level, mark a horizontal line on the wall to the height from the vanity where the mirror is to be installed.


Step 2

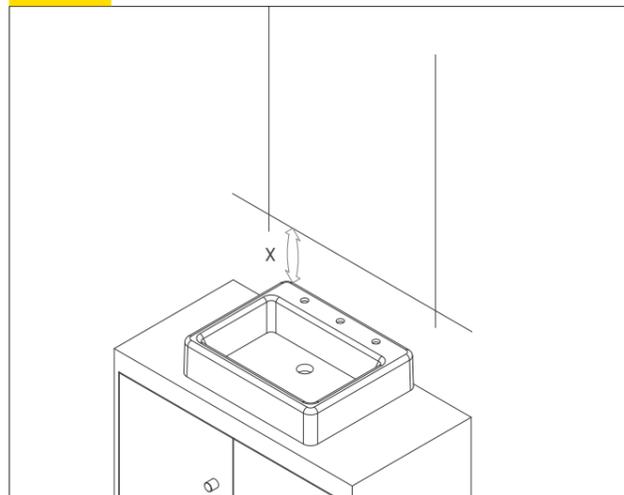

Measure the distance from the vanity / bench (if applicable) to the horizontal pencil line.

Cut two timber packers to this measurement.


Step 3

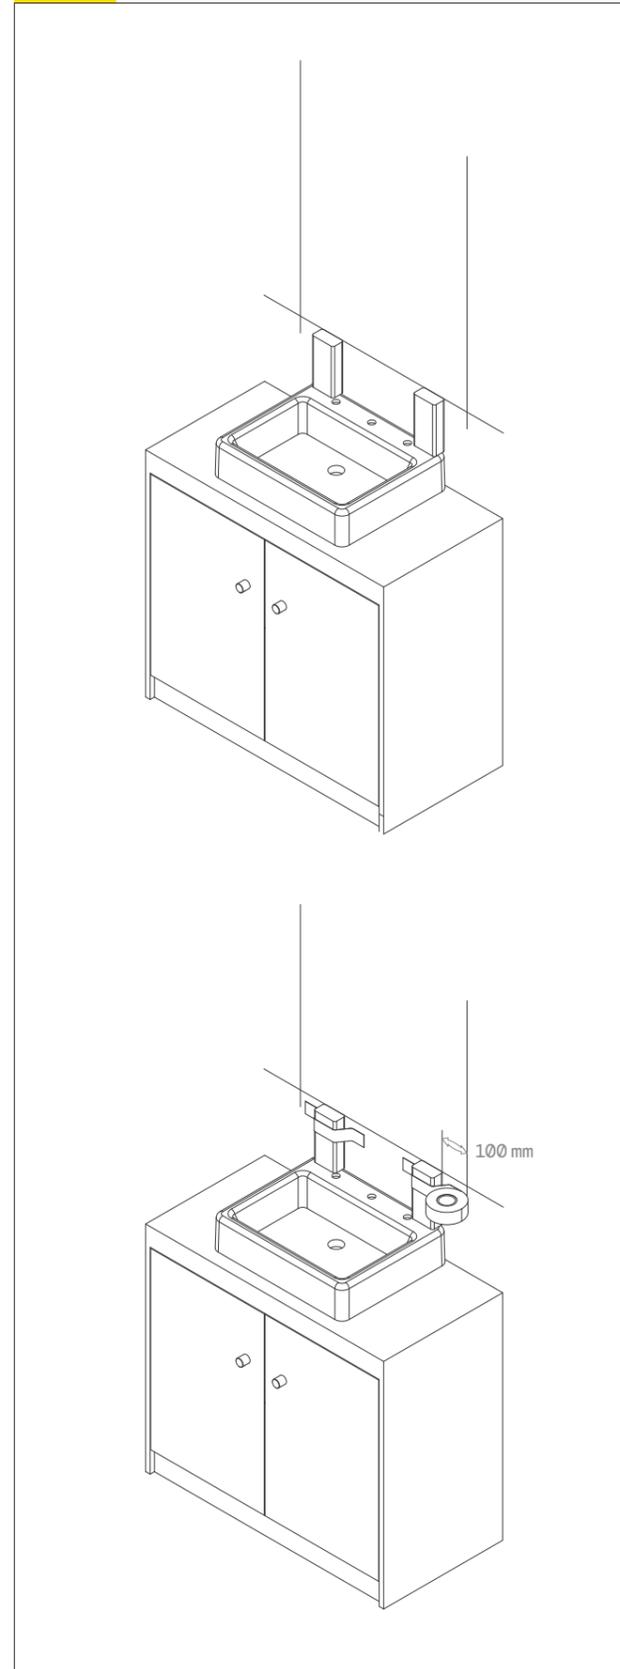

Tape packers to wall approx 100 mm in from each end of the mirror location.

(If installing mirror to vanity benchtop place a 2 mm packer under mirror).

Step 4

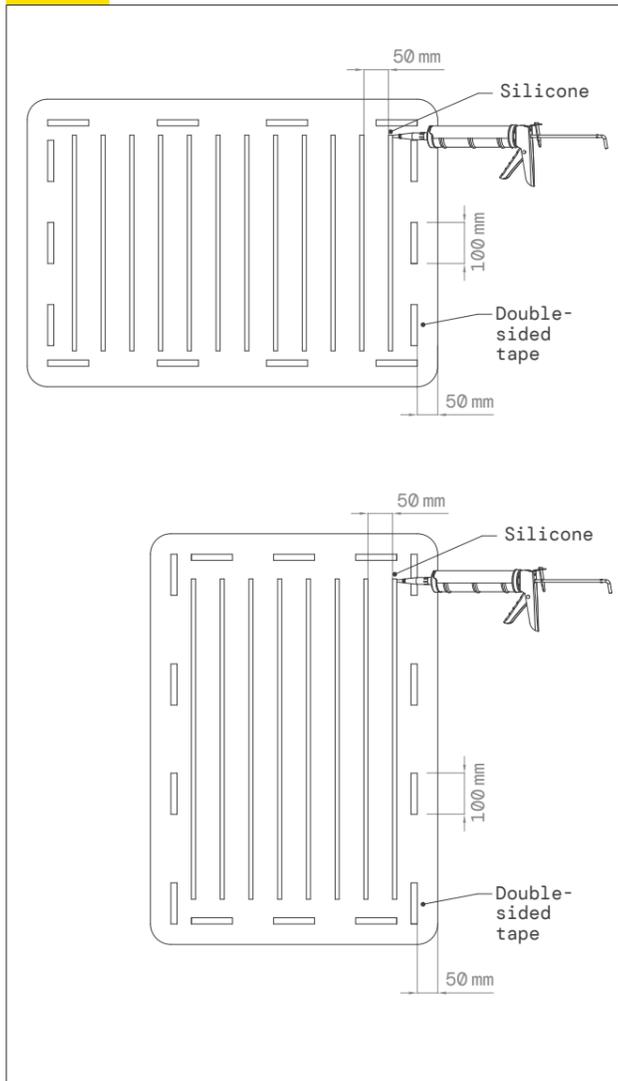

Cut 100 mm strips of double-sided tape and apply 50 mm in from the edge of the mirror as per diagram.


Apply mirror metal and glass adhesive (neutral-cure formulation).

Apply 10 mm x 10 mm silicone beads vertically 50 mm apart as per diagram.

Remove back of tape to expose the adhesive prior to install.

Do not remove the protective film for at least 72 hours after the installation has been completed.

Step 5

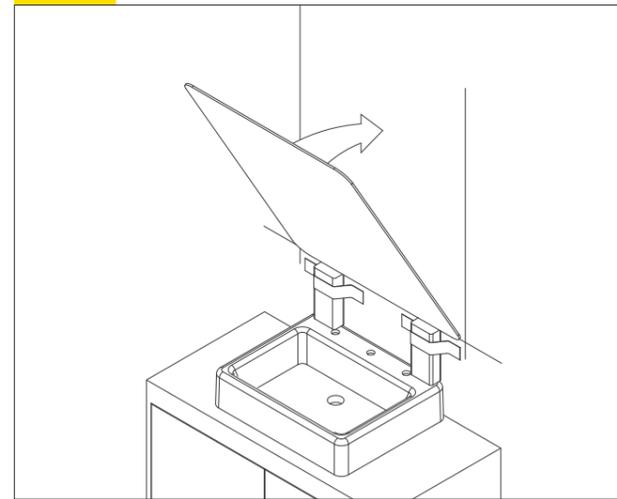


Before lifting the mirror ensure you are wearing your safety equipment.

Rest the mirror on timber packers, tilting it slightly off the wall.

Align mirror to pencil mark.

Press mirror firmly against wall to ensure glass adhesive has full contact with wall surface.


Step 6

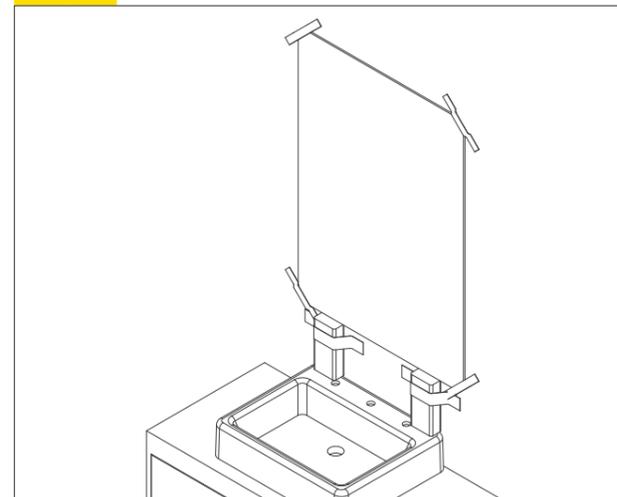

Apply tape to each corner of mirror to ensure mirror does not move.

Allow 72-hour curing time of silicone.

Step 7

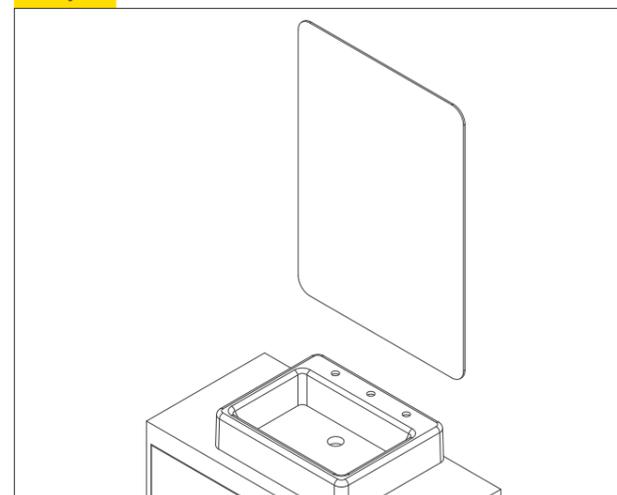

Remove tape and packers after the 72-hour cure time.

Remove the protective film.

Clean mirror.



Stegbar is not providing any installation of the product, which is your responsibility. The information in this assembly document is of a general nature only and is provided regarding a typical installation process. Accordingly, this assembly document does not take into account your specific circumstances, environment, needs, tools or skills.

You should not rely solely on the general information in this assembly document for installation. There are risks associated with installation and you assume those risks voluntarily by installing this product. To the extent permitted by law, Stegbar does not accept responsibility and is not liable for any loss, damage or injury suffered by you as a result of any circumstances specific to you that are not addressed in these assembly documents.

You should independently consider whether the services of any third party are appropriate for you. Any service supplied by a third party is subject to the terms and conditions of that third party. Stegbar is not responsible for any agreements, maintenance, delivery or satisfaction of any transactions undertaken with a third-party provider. To the extent permitted by law, Stegbar is not responsible and is not liable for any loss, damage or injury suffered by you as a result of the conduct of the third party.

Stegbar reserves the right to alter or amend without prior notice general information and design details specified in these assembly documents.
JSWNAT0567/0423 | stegbar.com.au | Version 1.0 | October 2023